

## BAG RESEALER™ USER MANUAL

Congratulations on your purchase of the BAG RESEALER™. You will find that the BAG RESEALER™ will soon become one of the most frequently used tool in your home.

- \*Save your money by keeping leftovers fresh
- \*Help maintaining vitamin and mineral content of food.
- \*Cover fragile souvenirs, gifts, remote controls etc. with PVC or similar materials and seal to protect them from moisture and dust.
- \*Seal airtight and watertight.
- \*Easy way to store clothes for winter.
- \*Seal any kind of plastic bags up to 0.4 mm thick.
- \*With the magnet strip on the backside, BAG RESEALER™ is always ready to use on the refrigerator.

### SAFETY INSTRUCTIONS

1. Do not touch the heater pad or touch another person with the heater pad
2. Remove the batteries in case you want to store the BAG RESEALER™ for a prolonged period of time.
3. Do not place on or near a hot gas or electric burner, or a heated oven.
4. Close supervision is necessary when the appliance is used by or near children.
5. Place the safety cover between the heating pads while not in use.

### HOW TO USE THE BAG RESEALER™

BAG RESEALER™ is operated by 2 AA ALKALINE batteries. Please make sure that alkaline batteries are used in order to get best result. Remove the battery cover by pulling both sides of the cover at the same time. Install batteries according to +/- signs.

1. Place the plastic bag between the main body and the press bar. Hold the plastic bag with one hand and the sealer with the other.
2. Press down slightly until both sides of the heater pad engage and wait for 3 seconds to heat up. Place your thumb in the middle of the press bar when sealing.
3. Start sliding the BAG RESEALER™ from starting point to the edge in a straight movement.
4. Flip the bag over and seal the remaining part.

**Important Notice:** For thicker plastic bags, which the BAG RESEALER™ can seal but cannot cut through, for thicker bags such as aluminum foil bags you need to slide the BAG RESEALER™ slower in order to get best results.

### REMEMBER !

1. Press down slightly
2. Wait for 3 seconds to heat up.
3. Move slower or quicker, depending on thickness of the bag. Slower for thicker bags, quicker for thinner bags.
4. If the bag is not sealed entirely, please repeat the process again.
5. If the sealer is not working properly, please check the batteries. If the power is too low, change the batteries.
6. Always use 2 AA Alkaline batteries

 
### WORLDWIDE PATENTS & TRADEMARKS

#### PATENT NUMBERS:

CHINA ZL01308273.6, ZL03201441.4, ZL98248077.6, ZL99119084.5, ZL01302148.6  
 ZL97327783.1, ZL98304496.1, ZL01318956.4, ZL98205445.9, ZL97250559.8  
 ZL98201928.9, ZL98201927.0  
 JAPAN 3047499  
 THAILAND 3348  
 H.K. HK1008462  
 TAIWAN 58550, 61995, 72256, 91041, 136585, 137656, 138584, 144046, 146962, 146965 & 151675  
 AUSTRALIA 704983  
 GERMANY 29716584.4 & M9002644.0  
 U.K. 2005973 & 2329145  
 U.S.A. 5,142,123, 5,854,466 & DES 328,750  
 S.A. 9710412  
 EURO. PAT. NO. 1 052 081 DE ES FR GB IT NL






iTouchless

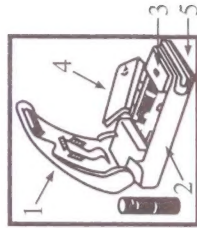

### PARTS:

   1. Press Bar
2. Main Body
3. Heating Pad
4. Battery Cover
5. Safety Cover

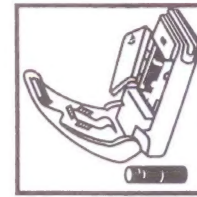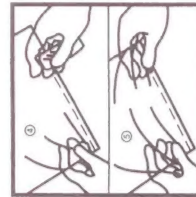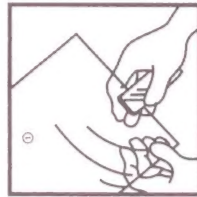

3 SECONDS  
TO HEAT UP

# iTouchless™ Bag Resealer™

- To Seal Unlimited Length By Sliding The Sealer.
- For: Office (Documents), Kitchen (Food), Warehouse (Material), Studio (Shots), Farm (Seeds), Garden (Flower), Drugstore (Drugs), Etc...
- To Protect, Keep Fresh And Dry For All.



NET WT 중량  
218.3g

R.O.C. 61995, 25026,  
72256,  
THAILAND 012363

PATENTED: U.K. 2005973

U.S.A. DES. 328,750

CHINA 58123 90207157.2

GERMANY M9002644.0 G9004188.7

